

**RADICA:**



17044

For 1 player / Ages 8 and up

## INSTRUCTION MANUAL

P/N 823A7000 Rev.B

E

To wake the unit from "Sleep Mode"  
To start a new game by pressing and holding

**NO** - Use this button to answer "No" to a question or prompt.

**SOMETIMES** - Press to answer "Depends" or "Maybe" to a question or prompt.

**UNKNOWN** - Press to answer "Irrelevant" or "Unknown" to a question or prompt.

**UNDO** - Pressing this button will allow you to go back to the last question and change your answer. You will not be able to UNDO any prior answers to previous questions.

**SOUND** - This button turns the sound on and off (a high tone indicates sound is on, and a low tone indicates sound is off).

**LIGHT** - This switch turns the backlight on and off.

**LEFT SIDE & RIGHT SIDE SCROLL BUTTON** - Use these two buttons to move forward or backward through a menu, or to return to a previous section. Pressing the LEFTSIDE SCROLL will also increase the text scrolling speed. Pressing the RIGHT SCROLL will slow it down.

**RESET** - When a blunt point is inserted, this button resets the game to its original settings.

**SLEEP MODE** - After 60 seconds of inactivity, the game will automatically shut down, going into "Sleep Mode". To turn it on again and resume your game, simply press the **YES / NEW GAME** button.

## HOW TO PLAY

Although you won't win, I'll tell you how to play anyway!

First, press the YES/NEW GAME button to begin a new game.

Next, I will ask you a series of questions that begin with "Is it... Animal?...Vegetable?...Mineral...Other, or Unknown?"

Use the LEFT SCROLL and RIGHT SCROLL buttons to toggle between the options. When making your selection, keep in mind that Animal, Vegetable and Mineral each has a broader meaning. Consider the object you have selected and think of its primary substance. For example, if you are thinking about a "wool sweater," you should say "Animal," because it's made of wool, which comes from sheep, which are animals. You should answer "Mineral" for an "arrow" because most of its parts are made of metal, and "Vegetable" for a "T-shirt," because it's made of cotton, which is a plant.

Once you have made your decision, press the YES/NEW GAME button to enter your answer.

Now I will ask you a series of questions. Answer honestly by pressing one of the answer buttons. Your answer should be "Yes," "No," "Sometimes," or "Unknown."

After a series of 20 questions, I will try to guess what you're thinking. If I guess correctly, press the **YES / NEW GAME**. If for some strange reason I guess wrong, I will ask you 5 more questions than guess again.

When I guess what you're thinking, I win! If all my guesses are wrong, you win. But don't worry, that will never happen.

Good Luck! You're going to need it!

## BATTERY INSTALLATION

This game is powered by two (2) AAA (LR03) batteries.

- Using a screwdriver, loosen the screw until the battery compartment door can be removed.
- Insert two (2) AAA (LR03) batteries (we recommend alkaline) as indicated inside the battery compartment.


## I KNOW WHAT YOU'RE THINKING!

You don't believe me, do you? Well, you soon will! Just think of an everyday object, and I will ask you a few simple questions. Answer the questions honestly, and I will tell you what you're thinking! Scary, isn't it?

## BUTTONS AND FEATURES

Press to increase speed of text and move backward through text

Press to decrease speed of text and move forward through text

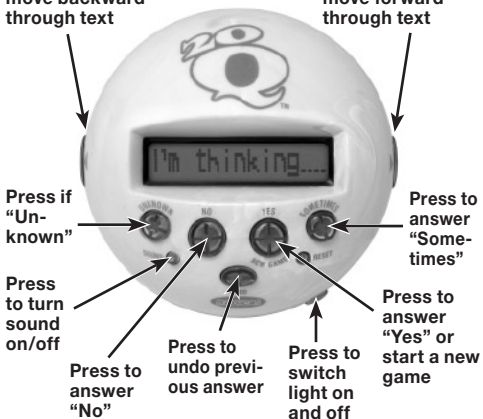

**YES / NEW GAME** - Use this button for the following:  
To answer "Yes" to a question or prompt

- Replace the battery compartment door and tighten the screw with a screwdriver. Do not over-tighten.

### ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

### CAUTION

- As with all small batteries, the batteries used with this device should be kept away from small children who might still put things in their mouths. If a battery is swallowed, consult a physician immediately.
- Be sure you insert the battery correctly and always follow the device and battery manufacturer's instructions.
- Do not dispose of batteries in fire.
- Batteries might leak if improperly installed, or explode if recharged, disassembled or heated.
- Sometimes, a build-up of static electricity (from carpets, etc.) may cause the game to stop working. Just reset the game, and it will work again.
- In an environment with radio frequency interference, the product may malfunction and require user to reset the product.

### MAINTENANCE

- Handle this game carefully.
- Store this game away from dusty or dirty areas.
- Keep this game away from moisture or temperature extremes.
- Do not disassemble this game. If a problem occurs, press the Reset button or remove and replace the batteries to reset the computer, or try new batteries. If problems persist, consult your warranty information located at the end of this instruction manual.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Remove any exhausted batteries from the game.
- The supply terminals are not to be short circuited.
- Insert batteries with the correct polarity.

#### Please retain this for future reference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

### RECYCLING - EUROPE

The consumer has a significant role to play in reducing the impact of waste electrical and electronic equipment on the environment, through re-using or recycling such equipment.

The crossed out wheellie-bin symbol on this product is to remind you that Waste Electrical and Electronic products should not be disposed of with household waste. If you are unable to re-use or recycle your product it should be disposed of at a civic amenity site.

While Radica toys comply with all relevant safety standards, we are obliged to tell you that some of the components used in electrical and electronic equipment may contain hazardous substances that can damage the environment and present a risk to human health if not properly disposed of.

### 90-DAY LIMITED WARRANTY

(This product warranty is valid in the United States and Canada only)

Radica Games Limited warrants this product for a period of 90 days from the original purchase date under normal use against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship. Radica Games Limited will not be liable for any costs incurred due to loss of use of this product or other incidental or consequential costs, expenses or damages incurred by the purchaser. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights, which vary from state to state.

During this 90-day warranty period, the game will either be repaired or replaced (at our option) without charge to the purchaser when returned prepaid with proof of date of purchase to: **Radica USA, Ltd., 13628-A Beta Road, Dallas, Texas 75244, USA.** Please remove the batteries and wrap the unit carefully before shipping. Please include a brief description of the problem along with your return address and mail it postage prepaid.

**IMPORTANT:** Before returning the unit for repair, test it with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

Distributed by:  
**RADICA USA Ltd.**  
 13628-A Beta Road  
 Dallas, TX 75244-4510



Play on-line at [www.20Q.net](http://www.20Q.net). Marketed under license from 20Q.net, Inc. All rights reserved.

**RADICA:** ®  
 20Q AND "I CAN READ YOUR MIND"  
 ARE TRADEMARKS OF 20Q.NET, INC.  
 USED UNDER LICENSE BY RADICA GAMES LTD.  
 © 2006 RADICA GAMES LTD.  
 PRODUCT SHAPE™  
 ALL RIGHTS RESERVED